

# INSTALLATION, OPERATION AND MAINTENANCE MANUAL

## FLT<sup>®</sup> Series FlexSwitch<sup>®</sup> Flow, Level, Temperature Switch/Monitor

Doc. No. 06EN003246

Rev. B

Patent 4,967,593

---

### **Notice of Proprietary Rights**

---

This document contains confidential technical data, including trade secrets and proprietary information which are the property of Fluid Components Intl (FCI).

Disclosure of this data to you is expressly conditioned upon your assent that its use is limited to use within your company only (and does not include manufacture or processing uses). Any other use is strictly prohibited without the prior written consent of FCI. FLT<sup>®</sup> uses FCI's Proprietary FLEXSWITCH<sup>®</sup> Technology.

---

*© Copyright 1996 Fluid Components Intl  
a limited liability company  
All Rights Reserved*



## CUSTOMER COMMITMENT PLEDGE

We will work closely with our customers to provide the best products and service

- at a competitive value
- on time
- with unquestioned support

in full compliance with our *COMPLETE CUSTOMER COMMITMENT*.

## COMMITMENT TO QUALITY

In keeping with the overall commitment of management and employees of Fluid Components Intl to Total Quality Management, the publications department expresses its pledge and mission to you, our customer:

*“To support the creation and publication of world-class technical material which is technically accurate and practical, concise and user-friendly, attractive and professional in appearance, and consistent in form, format, content, and style.”*

## QUALITY IMPROVEMENT

We appreciate your comments and suggestions which support our effort to constantly improve our product and services. Please address comments and suggestions to your nearest field representative or in-house technical support representative. Thank you.

FCI Technical Publications Department

## **CUSTOMER SERVICE/TECHNICAL SUPPORT**

FCI provides full in-house technical support for our products 7 a.m. to 5 p.m. PST, Monday through Friday (excepting holidays and an annual plant closure between Christmas and New Year's day). Also, additional technical representation is provided by FCI field representatives. Before contacting one of our field or in-house representatives, please ensure that you have performed the troubleshooting techniques outlined in this document.

### ***By Mail***

Fluid Components Intl  
1755 La Costa Meadows Dr.  
San Marcos, CA 92069  
Attn: Customer Service Department

### ***By Phone***

Contact the FCI regional representative in your area. If you are unable to contact the field representative or are unable to satisfactorily resolve the situation, contact the FCI Customer Service Department at 1 (800) 854-1993, toll free.

### ***By Fax***

To describe your problems in a more graphic or pictorial manner, send your fax including your phone or fax number to your regional representative. Again FCI is available through facsimile if you have exhausted your possibilities with the authorized factory representative. Our fax number is (760) 736-6250; it is available 7 days a week, 24 hours a day.

### ***International Support***

For product information or product support outside the contiguous United States, Alaska, or Hawaii, contact your country's FCI International Representative or the one nearest to you. See the list on following pages.

Appendix C contains a detailed explanation of the FCI customer service policy on returns, adjustments, in-field or factory repair, in- or out-of-warranty.

Reserved for Domestic Rep Map

Reserved for International Rep Map

# REVISIONS

REV.	DESCRIPTION	DATE	AUTHOR
A	<p>Added Revision Page. Revised Table of Contents.</p> <p>Chapter 1 Theory of Operation: Changed wording; signal conditioner to control circuit.</p> <p>Chapter 1 Specifications: Revised Specification information .</p> <p>Chapter 3 Page 3-1, Heater Cut-Off: Revised description.</p> <p>Chapter 3 Table 3-1: Corrected typographical error. Deleted an incorrect statement.</p> <p>Chapter 3 Figure 3-1: Added potentiometer call out R5 to the figure.</p> <p>Chapter 3 Table 3-3A: Changed asterisk information.</p> <p>Chapter 3 Tables 3-3A, 3-3B: Changed wattage values.</p> <p>Appendix A Figure A-1, A-7 and A-8: Updated drawings.</p> <p>Appendix A Figures A-1, A-4, A-5, A-7 and A-9: Changed the figure captions to correctly identify the figures.</p> <p>Appendix A Added Figures A-13, A-14 and A-15.</p> <p>Appendix C Pages C-1, C-3, C-4 and C-5: Changed wording; Attachment to Document. Added paragraph to clarify that documents are indeed added to the appendix.</p> <p>Appendix D Page D-2, Step 5. Corrected jumper number and added a reference to Figure 3-1.</p> <p>Appendix D Table D-1: Changed wattage and a voltage values.</p>	1/24/95	R. Sanders
B	<p>Added Appendix E CE Mark information. Added information on FLT93-C and FLT93-L. Added remote relay wiring information. Change bars have also been added to draw attention to new information.</p>	2-25-96	R. Sanders

# Contents

## 1. General Information

Description .....	1 - 1
Theory of Operation .....	1 - 1
Sensing Element .....	1 - 1
Control Circuit .....	1 - 1
Technical Specifications .....	1 - 2

## 2. Installation

Receiving/Inspection .....	2 - 1
Packing/Shipping>Returns .....	2 - 1
Factory Calibration Note .....	2 - 1
Pre-Installation Procedure .....	2 - 1
Use Standard ESD Precautions .....	2 - 1
Prepare or Verify Sensing Element Location .....	2 - 2
Verify Dimensions .....	2 - 2
Verify Sensing Element Flow Direction and Placement Orientation (Flow) .....	2 - 2
Verify Sensing Element Flow Direction and Placement Orientation (Level) .....	2 - 2
Install the Sensing Element .....	2 - 2
Male NPT Mounting .....	2 - 2
Flange Mounting .....	2 - 3
Packing Gland Assembly .....	2 - 3
In-Line NPT Assembly .....	2 - 3
Sanitary Assembly .....	2 - 4
Install and Wire the Enclosure .....	2 - 4
Minimum Wire Size .....	2 - 4
Wiring the Local Enclosure .....	2 - 5
Wiring at the Remote Enclosure .....	2 - 6
Locate the Remote Hardware Location .....	2 - 6
Wiring Remote Enclosure with Auxiliary Relay .....	2 - 7
Wiring a Remote Control Circuit To A Auxiliary Relay Board .....	2 - 8
Wiring Output Signal Terminals .....	2 - 8

## 3. Operation

Factory Default Jumper Configuration .....	3 - 1
Configuration Jumpers .....	3 - 1
Heater Cut-Off .....	3 - 1
Alarm Set Point Adjustment .....	3 - 2
Numerical Adjustment Versus Adjustment by Observation .....	3 - 2
Numerical Set Point Adjustment .....	3 - 3
Air/Gas Flow Applications .....	3 - 4
Wet/Dry Liquid Level Applications .....	3 - 7
Temperature Applications .....	3 - 8
Liquid Flow Applications .....	3 - 10
Adjustment by Observation .....	3 - 12
Flow Applications .....	3 - 12
Level Applications .....	3 - 12
Temperature Applications .....	3 - 13
Converting Temp Out Voltage to Temp in Degrees F .....	3 - 19
Fail Safe Alarm Setting .....	3 - 20
Low Flow Alarm Setting .....	3 - 20
High Flow Alarm Setting .....	2 - 20
Low Level Alarm Setting .....	3 - 20
High Level Alarm Setting .....	2 - 20

## 4. Maintenance

Maintenance .....	4 - 1
Calibration .....	4 - 1
Electrical Connections .....	4 - 1

Remote Enclosure .....	4 - 1
Electrical Wiring .....	4 - 1
Sensing Element Connections .....	4 - 1
Sensing Element Assembly .....	4 - 1
<b>5. Troubleshooting</b>	
Tools Needed .....	5 - 1
Quick Check .....	5 - 1
Non-maintenance Observations .....	5 - 1
Check Serial Numbers .....	5 - 1
Check Input Power .....	5 - 1
Check the Instrument Installation .....	5 - 1
Check for Moisture .....	5 - 1
Check Application Design Requirements .....	5 - 2
Troubleshooting the Flow Element .....	5 - 2
Troubleshooting the Flow Transmitter .....	5 - 2
Spares .....	5 - 4
Defective Parts .....	5 - 4
Customer Service .....	5 - 4
<b>Appendix A. Drawings</b>	
Outline Drawings .....	A - 1
<b>Appendix B. Glossary</b>	
Abbreviations and Explanation of Terms .....	B - 1
<b>Appendix C. Customer Service</b>	
Policy and Procedures .....	C - 1
<b>Appendix D. Temperature Compensation</b>	
Temperature Compensation Procedure .....	D - 1
<b>Appendix E. CE Conformance</b>	
CE Conformance Information .....	E - 1

## Figures

Figure 1-1. View of the Sensing Element .....	1 - 1
Figure 2-1. NPT Pipe Thread Mount .....	2 - 2
Figure 2-2. Flange Mount .....	2 - 3
Figure 2-3. FLT93-L In-line Flow Element .....	2 - 4
Figure 2-4. FLT93-C Sanitary Flow Elements .....	2 - 4
Figure 2-5. Local Wiring Diagram .....	2 - 5
Figure 2-6. Remote Wiring Diagram .....	2 - 6
Figure 2-7. Auxiliary Relay Board Wiring Diagram .....	2 - 7
Figure 3-1. 5294 Control Circuit Jumper Locations .....	3 - 2
Figure 3-2. 5294 Control Circuit Component Locations .....	3 - 4
Figure 3-3. Flow Application Signal Output .....	3 - 5
Figure 3-4. Level Application Signal Output .....	3 - 7
Figure 3-5. Low Flow Fail Safe Alarm .....	3 - 20
Figure 3-6. High Flow Fail Safe Alarm .....	3 - 20
Figure 3-7. Low Level Fail Safe Alarm .....	3 - 21
Figure 3-8. High Level Fail Safe Alarm .....	3 - 21
Figure 5-1. Troubleshooting Chart .....	5 - 3
Figure A-1. Local Enclosure, NEMA Type 4X and Hazardous Location .....	A - 1

Figure A-2. Local Enclosure NEMA Type 4X ..... A - 1  
 Figure A-3. Remote Enclosure NEMA Type 4X ..... A - 1  
 Figure A-4. Remote Enclosure NEMA Type 4 and Hazardous Location ..... A - 2  
 Figure A-5. Remote Enclosure, Killark, NEMA Type 4 and Hazardous Location ..... A - 2  
 Figure A-6. 1/4, 3/4 or 1 Inch NPT Process Connection ..... A - 2  
 Figure A-7. Flanged Process Connection ..... A - 3  
 Figure A-8. Low Pressure Packing Gland ..... A - 3  
 Figure A-9. Flanged Low Pressure Packing Gland Process Connection ..... A - 3  
 Figure A-10. 1-1/4 Inch Medium Pressure Packing Gland Connection ..... A - 4  
 Figure A-11. Flanged Medium Pressure Packing Gland Process Connection ..... A - 4  
 Figure A-12. 1/4 Inch Process Connection ..... A - 4  
 Figure A-13. Wire Pigtail Process Connection ..... A - 5  
 Figure A-14. Injection Tube with Tee Fitting ..... A - 5  
 Figure A-15. 3/4 Inch Female NPT FLT93-L With U-Bolt Bracket Kit ..... A - 5  
 Figure A-16. 1 Inch NPT FLT93-L ..... A - 6  
 Figure A-17. 1 Inch RF Flanged FLT93-L ..... A - 6  
 Figure A-18. FLT93-C Sanitary Removable Clamp Instrument ..... A - 6  
 Figure A-19. FLT93-C Sanitary Clean-In-Place Instrument ..... A - 7  
 Figure A-20. FLT93 Auxiliary Relay ..... A - 7  
 Figure A-21. FLT93 PWB Module ..... A - 8  
 Figure D-1. Sensing Element Calibration Connections ..... D - 3

## Tables

Table 2-1. Maximum AWG Number ..... 2 - 5  
 Table 3-1. Standard Jumper Default Configuration ..... 3 - 1  
 Table 3-2. Input Power ..... 3 - 3  
 Table 3-3A. Selectable Heater Wattage Control ..... 3 - 3  
 Table 3-3B. Fixed Heater Wattage Control ..... 3 - 3  
 Table 3-4. Application ..... 3 - 3  
 Table 3-5. Relay Energization ..... 3 - 3  
 Table 3-6. Relay Contact Configuration ..... 3 - 3  
 Table 3-7. Temperature Versus Voltage Output ..... 3 - 14  
 Table 5-1. Resistance at Control Circuit Terminal Block Socket ..... 5 - 2  
 Table 5-2. Resistance at Flow Element Enclosure Terminal Block ..... 5 - 2  
 Table D-1. Heater Voltage Settings ..... D - 3  
 Table D-2. Temp Comp Factor Table ..... D - 5

# Symbols

The following symbols are used throughout the manual to draw attention to items or procedures that require special notice or care.



**Warning:** Warns of possible **personal danger** to those handling the equipment.



**Caution:** Cautions against possible **equipment damage**.



**Note:** Contains important information.

