



COMPONENT MAINTENANCE MANUAL

FCI Document Control Number: 06EN003238 Rev. C

AIR FLOW SWITCH

PART NUMBERS

009519-04	016498-01
009519-05	016498-03
009519-06	
009519-07	
009519-08	
009519-09	

NOTICE OF PROPRIETARY RIGHTS

This document contains confidential technical data, including trade secrets and propriety information which is the property of Fluid Components International LLC (FCI).

Disclosure of this data to you is expressly conditioned upon your assent that its use is limited to use within your company only (and does not include manufacture or processing uses). Any other use is strictly prohibited without prior written consent of FCI.

TITLE PAGE

Page 1

ORIGINAL ISSUE 06/01/94

REVISED 01/17/05

21-58-02

Fluid Components International LLC

COMPONENT MAINTENANCE MANUAL
PART NUMBERS 009519 AND 016498

RECORD OF REVISIONS

Rev.	Description	Date
A	See Revision NC for changes.	
B	See Revision A for changes.	
C	***Updated Entire Document***	1/17/05
	Added 016498-03, 009519-08, 009519-09.	
	Incorporated all pages into one document and renumbered pages.	
	Updated proprietary statement on title page.	
	Added proprietary statement, document number and revision on all pages	
	Updated Figure 3 drawing to include 016498-03,009519-08, 009519-09.	

Fluid Components International LLC

COMPONENT MAINTENANCE MANUAL

PART NUMBERS 009519 AND 016498

SERVICE BULLETIN LIST

Service Bulletin information is placed in this list when the Service Bulletin is incorporated into this manual.

S.B. NUMBER	DESCRIPTION	PARTS ADDED OR CHANGED	INCORPORATED IN REVISION	EFFECTIVITY

Fluid Components International LLC

COMPONENT MAINTENANCE MANUAL

PART NUMBERS 009519 AND 016498

LIST OF EFFECTIVE PAGES

SUBJECT	PAGE	DATE
TITLE PAGE	1	1/17/05
SERVICE BULLETIN LIST	2	1/17/05
LIST OF EFFECTIVE PAGES	3	1/17/05
TABLE OF CONTENTS	4	1/17/05
INTRODUCTION	5	1/17/05
DESCRIPTION AND OPERATION	6	1/17/05
	7	1/17/05
	8	1/17/05
	9	1/17/05
	10	1/17/05
	11	1/17/05
TESTING	12	1/17/05
	13	1/17/05
CLEANING	15	1/17/05
INSPECTION/CHECK	15	1/17/05
REPAIR	15	1/17/05

Fluid Components International LLC

COMPONENT MAINTENANCE MANUAL
PART NUMBERS 009519 AND 016498

TABLE OF CONTENTS

<u>PARAGRAPH TITLE</u>	<u>PAGE</u>
Introduction	6
Description and Operation	7
Testing	12
Cleaning	15
Inspection/Check	15
Repair	15

Fluid Components International LLC

COMPONENT MAINTENANCE MANUAL
PART NUMBERS 009519 AND 016498

INTRODUCTION

1. General

- A. This manual provides maintenance instructions for the Model 009519-04 through 009519-09, 016498-01 and 016498-03 Air Flow Switch.
- B. The information in this abbreviated manual covers the description, operation, testing, cleaning, and inspection of this equipment.
- C. The Air Flow Switch is manufactured by Fluid Components Intl, San Marcos, California (CAGE CODE 64818), for Bombardier Inc. Canadair Group.

2. Ordering of Parts

Ordering of parts is to be directed as follows:

Fluid Components International LLC
1755 La Costa Meadows Drive
San Marcos, California 92078-5115
Attention: Customer Sales
Phone: (800) 854-1993 or FAX: (760) 736-6250

3. Manual Requests

Requests for copies of publications should be directed to the address shown in Paragraph 2.

4. Manual Revisions

This manual will be revised as necessary to reflect current information.

Fluid Components International LLC

COMPONENT MAINTENANCE MANUAL

PART NUMBERS 009519 AND 016498

DESCRIPTION AND OPERATION

1. Description

The Model 009519, 016498-01 and 016498-03 Air Flow Switch monitors the mass air flow in aircraft Environmental Cooling Systems. Figure 1 shows the Air Flow Switch. The Air Flow Switch can be set to switch over a wide flow range. The instrument consists of a probe that is in physical contact with the air flow and electronic switch circuitry that detects flow rate changes. The instrument has no moving parts, is lightweight, compact, qualified to RTCA/DO-160B, reliable and maintenance free. Some of the typical applications for this Air Flow Switch are to monitor secondary air supply lines that lead to the avionics manifold, cargo areas, main cabin and lavatories. The physical and operational characteristics of the Air Flow Switch are listed in Figure 2. Figure 3 shows the outline dimensions of the Air Flow Switch for proper mounting.



Air Flow Switch
Figure 1

Fluid Components International LLC

COMPONENT MAINTENANCE MANUAL
PART NUMBERS 009519 AND 016498

Item	Characteristic
Process Connection	Flange mount with a .094 inch (0.24 cm) diameter index pin
Insertion Length	Model -04: 1.46 in. Model -05, -08: 1.25 in. Models -06, -07, -09 1.80 in. Model 016498-01 and Model 016498-03: 1.46 in.
Material	All wetted surfaces 316 stainless steel with nickel braze per AMS4777. Electronics enclosure is aluminum, coated with electroless nickel plate per MIL-C-26074B, AMS 2404 (.0002-.0005 thick).
Flow Range	0.01 to 200 SFPS (0.003 to 61 SMPS) in Air
Repeatability	±1% full signal range at constant conditions
Time Response	7 seconds to respond to a low flow condition
Switch Point Adjustment	Factory set and calibrated over the flow range shown above
Power Input	28 +1.5, -6 Vdc
Signal Output (For P/N 009519-01 through -06, -08, -09, 016497)	High (flow) source 2 mA at 17 Vdc minimum. Low (no-flow) sinks 2 mA at 1 Vdc maximum
Signal Output (For P/N 009519-07)	High (flow) - open, leakage <10mA at 28 Vdc. Low (no-flow) sink <150mA at 0.5 Vdc maximum
Power Consumption	85 mA maximum for P/N 009519-04 through -06, -08, -09, 016498-01 and 016498-03. 100 mA maximum for P/N 009519-07.
Electrical Connection	Receptacle TVP02RF09-35PN (Bendix Tri-start)
Operating Temperature	-65° to 180°F (-54° to 82°C)
Weight	5.6 Ounces (159 Grams) maximum
Qualification	RTCA-DO-160B

Leading Particulars
Figure 2

Fluid Components International LLC

COMPONENT MAINTENANCE MANUAL
PART NUMBERS 009519 AND 016498




2. Operation

The probe consists of two thermowells (hollow tubes) of the same size, shape and mass that are welded together. One thermowell contains 2 platinum Resistance Temperature Detectors (RTDs). The other thermowell contains a heater element and an empty space for mass equalization (see Figure 4). The RTD located next to the heater element is known as the active RTD. The other RTD is known as the reference RTD. Since the active RTD is next to the heater, the temperature at the walls of the thermowell are always above the temperature of the process media. The temperature at the reference RTD is the temperature of the process media. When the process media is flowing past the active RTD a quantity of heat is carried off into the flow stream. The amount of heat taken from the active RTD is a function of the air flow rate. A Temperature Differential (ΔT) exists between the RTD thermowells and a proportional Resistance Differential (ΔR) exists between the active and the reference RTDs that the circuitry measures. The relationship of ΔT to the flow rate is calculated by the circuitry. The circuitry converts the ΔR to an off or on signal that is sent to the aircraft's alarm system.


Fluid Components International LLC

COMPONENT MAINTENANCE MANUAL


PART NUMBERS 009519 AND 016498

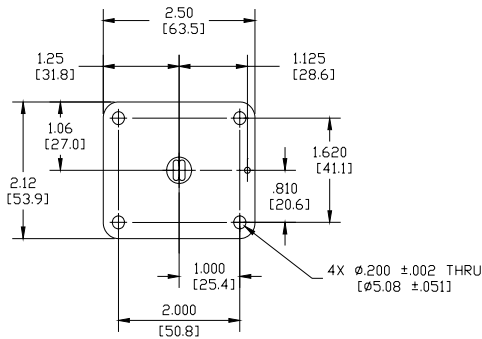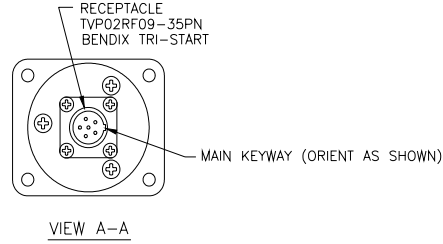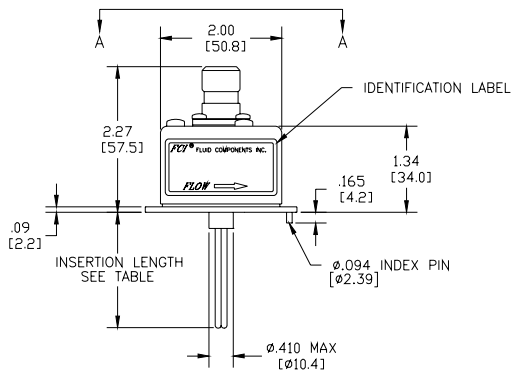

CONFIGURATION TABLE				
FCI PART NO.	DESCRIPTION	SENSOR SET PT.	INSERTION LENGTH	CANADAIR DESIGN TRIP FLOW
009519-01	DELETED	DELETED	DELETED	
009519-02	DELETED	DELETED	DELETED	
009519-03	DELETED	DELETED	DELETED	
009519-04	COCKPIT DISPLAY SUPPLY	1.12 LB/MIN [30.5 KG/HR]	1.46 IN. [37.1mm]	.825 LB/MIN [22.5 KG/HR]
009519-05	ARINC SUPPLY	1.89 LB/MIN [51.4 KG/HR]	1.25 IN. [31.7mm]	.88 LB/MIN [24.0 KG/HR]
009519-06	DISPLAY EXHAUST	5.38 LB/MIN [146 KG/HR]	1.80 IN. [45.7mm]	4.15 LB/MIN [113 KG/HR]
009519-07	COCKPIT EFIS SYSTEM / MASTER CAUTION	3.5 LB/MIN [45.3 KG/HR]	1.80 IN. [45.7mm]	3.5 LB/MIN [45.3 KG/HR]
009519-08	ARINC SUPPLY	.66 LB/MIN	1.25 IN. [31.7mm]	.66 LB/MIN
009519-09	DISPLAY EXHAUST	3.90 LB/MIN	1.80 IN. [45.7mm]	3.90 LB/MIN
016498-01	AIR FLOW SENSOR SWITCH ASSEMBLY	3.5 SFPS	1.46 IN. [37.1mm]	3.5 SFPS
016498-03	AIR FLOW SENSOR SWITCH ASSEMBLY	.83 LBS/MIN +5/-0% (DECREASING)	1.46 IN. [37.1mm]	.83 LBS/MIN +5/-0% (DECREASING)

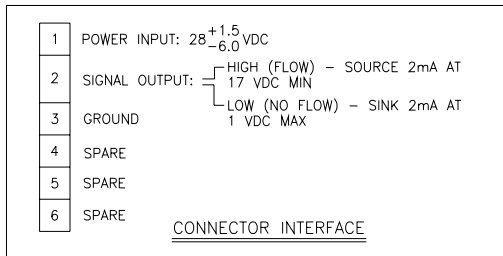

009519-04 THRU -06, -08 AND -09,
016498-01 AND 016498-03

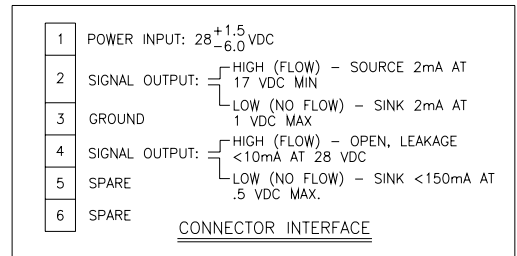


009519-07 ONLY

Outline Dimensions
Figure 3

Fluid Components International LLC

COMPONENT MAINTENANCE MANUAL

PART NUMBERS 009519 AND 016498

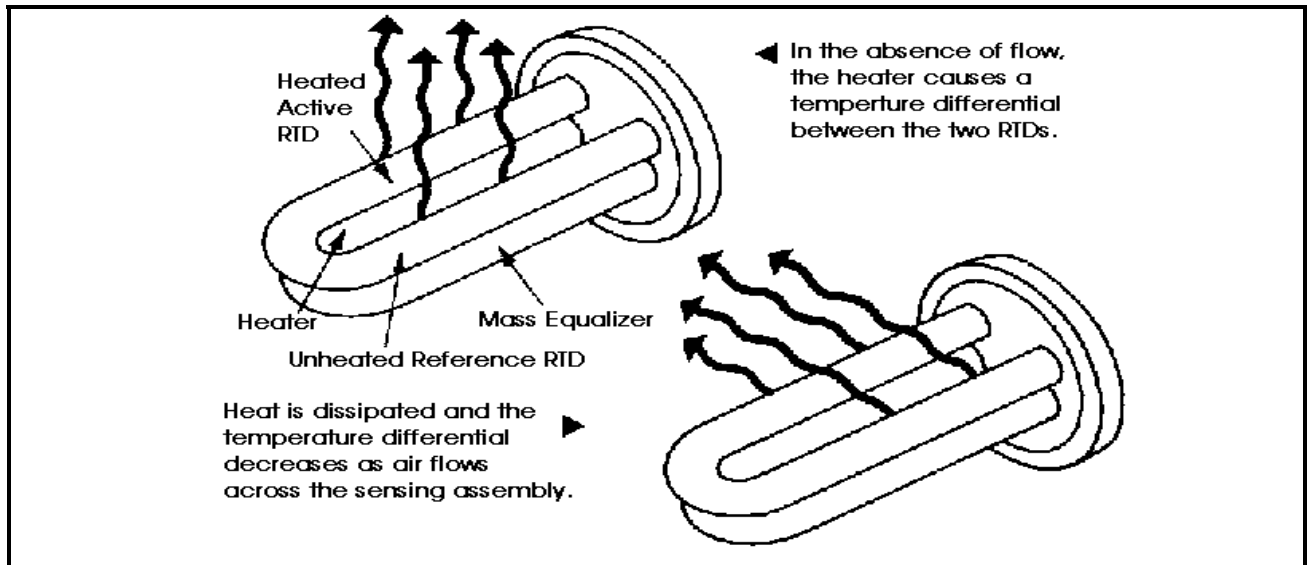

Probe Configuration
Figure 4

Fluid Components International LLC

COMPONENT MAINTENANCE MANUAL
PART NUMBERS 009519 AND 016498

TESTING

1. General

The Air Flow Switch (referred to hereafter as switch) is easy to troubleshoot due to the simplicity of design, switch failures can be as simple to correct as removing debris that has collected on the probe. If the switch is newly installed, check that the Flow Arrow on the Identification Label points in the same direction as the air flow in the system.

2. Test Equipment

JD38999/26WA35SN connector with wires for connecting to test equipment

Precision Digital Multi-Meter (DMM)

DC Power Supply capable of supplying 28 VDC at 160 mA

Stop Watch

Approximately a 4-ounce (120 mL) container of water (optional)

3. Test Procedure

A. Preliminary Verifications

Before removing the instrument for bench testing, verify the following:

- (1) The impedance of the switch output is at least 8.5 K ohms. An impedance less than this value can result in false output signals.
- (2) The output of the switch is not tied together with the output of another switch. Outputs between two or more switches can not be tied together with the output of another flow switch; they must be monitored independently. Tying the output of two switches together can render the switch inoperable.

B. Preparation for Bench Testing For All Model Dash Numbers

- (1) Disconnect the electrical connection receptacle and remove the switch from the process piping.
- (2) Set up the switch on a bench top for testing.
- (3) Mate the switch electrical connector with a wired D38999/26WA35SN connector to access power and switch point pins.
- (4) Connect a 28 Vdc power supply (+) lead to pin 1 (power input) and the (-) lead to pin 3 (ground).

Fluid Components International LLC

COMPONENT MAINTENANCE MANUAL
PART NUMBERS 009519 AND 016498

- (5) Connect a DMM (+) lead to pin 2 (signal input/output) and the (-) lead to pin 3 (ground). This monitors the output signal, either 17 Vdc - High; or 1 Vdc - Low.
- C. Bench Test switch Set Point Operation for 009519 -04, -05, -06, -08 and -09, 016498-01 and 016498-03 switches.
(Option 1)

Power cycling is one of two ways to test the switch.

Removing the power on the switch will cause the active (heated) RTD to cool. After the active RTD has cooled to the same temperature as the reference RTD and the power is reapplied, the bridge voltage input is at its lowest point. A high flow condition is simulated and the output signal should be High; 17 Vdc. As the active RTD heats up, the bridge voltage input rises simulating a low flow condition and the output signal should change to 1 Vdc. Follow the procedure below.

- (1) Monitor the output voltage signal across pins 1 and 3 as described above.

WARNING: ONLY QUALIFIED PERSONNEL SHOULD ATTEMPT TO TEST THIS SWITCH. THE OPERATOR ASSUMES ALL RESPONSIBILITIES FOR SAFE PRACTICES WHILE TROUBLESHOOTING.

- (2) Apply power.
 - (3) Let the Switch self-heat for approximately 1 minute. The output should read 0.5 ± 0.5 Vdc.
 - (4) Remove the power and let the Switch cool for 3 minutes.
 - (5) Re-apply the power. The output signal should read 18 ± 1.0 Vdc.
 - (6) Continue to monitor the output signal and verify that it drops to approximately 1 Vdc. The output should change states from 17 to 1 Vdc within 120 seconds.
- D. Bench Test Switch Set Point Operation for 009519 -04, -05, -06, -08 and -09, 016498-01 and 016498-03 switches.
(Option 2)

Liquid exposure is the second way to test the Switch.

Immersing the Switch probe in water rapidly cools the active RTD and simulates a high air flow condition. The user can observe the output signal change between 1 Vdc - in still air (no flow) to 17 Vdc - in liquid (high air Flow). Follow the procedure below.

WARNING: ONLY QUALIFIED PERSONNEL SHOULD ATTEMPT TO TEST THIS SWITCH. THE OPERATOR ASSUMES ALL RESPONSIBILITIES FOR SAFE PRACTICES WHILE TROUBLESHOOTING.

- (1) Apply power as described above. Let the switch sit on the bench top in still air.
- (2) Wait approximately 3 minutes for the switch to stabilize.

Fluid Components International LLC

COMPONENT MAINTENANCE MANUAL

PART NUMBERS 009519 AND 016498

- (3) Monitor the output - verify that the output is 0.5 ± 0.5 Vdc in still air (this is a "no flow" or very low flow condition).
- (4) Immerse the probe (oval-shaped thermowells 1 inch in length) in water and let stabilize for approximately 2 minutes. Do not immerse past the flange.
- (5) Monitor the output - verify that the output is 18 ± 1 Vdc in liquid (this is a simulated high flow condition).

E. Bench Test switch set point operation for 009519 –07.

Test this switch with one of the above procedures. Then repeat the steps using pin 4 as the input/output signal instead of pin 2.

F. Conclusion

If the above conditions have been verified and problems are still being experienced please contact the FCI customer Service Department as shown in Paragraph 2 of the introduction.

If one or more of the above tests have failed, contact the FCI Customer Service Department and arrange to have the Switch sent back for repair or replacement.

Fluid Components International LLC

COMPONENT MAINTENANCE MANUAL
PART NUMBERS 009519 AND 016498

CLEANING

1. Cleaning Solutions

CAUTION: DO NOT USE SANDPAPER OR METAL INSTRUMENTS TO SCRAPE THE SWITCH WHEN CLEANING.

- A. Use cleaning solutions that are compatible with the air ducting.
- B. Remove foreign material from the external surfaces with a moist cloth and then dry with a soft clean cloth.

INSPECTION/CHECK

1. General Condition

Visually inspect the switch periodically for physical damage. The switch should be free of corrosion, and cracks.

2. Probe Condition

Visually inspect the probe portion of the switch for physical damage. The probe should be free of corrosion, cracks and dents.

REPAIR

The switch is not field repairable: If it fails to operate properly return it to FCI at the address in paragraph 2 of the Introduction.