

SUBJECT	CAGE CODE	DATE	SECTION	PAGE	REVISION
FC88 Kit Instructions	64818	07-28-22		i of iv	C

**FC88 KIT
INSTRUCTIONS**

APPROVALS

Originator

Engineering

Manufacturing

QA

NOTICE OF PROPRIETARY RIGHTS

This document is the property of Fluid Components International LLC (FCI) and contains confidential and proprietary information including, without limitation, trade secrets, design, manufacturing, processing, form fit and function data, technical data, and/or cost and pricing information, developed exclusively at FCI's private expense. Disclosure of this information to you is expressly conditioned on your assent that its use is limited to use only within your company (and does not include manufacturing or processing uses). Any other use, including re-procurement, replication of FCI products, or other use directly or indirectly in any way detrimental to FCI's interests is strictly prohibited without prior written consent of FCI. This document is subject to the protections of 18USC1905 (Trade Secrets Act), 5USC552 (Freedom of Information Act), Executive Order 12600 of 6/23/87, 18USC1832 (Economic Espionage and Trade Secrets Act of 1996), and Cal. Civ. Code 3426 et seq (Uniform California Trade Secrets Act). Recipients of this document agree to maintain this legend and affix it to any duplication or reproduction, in whole or in part, of the document.

SUBJECT FC88 Kit Instructions	CAGE CODE 64818	DATE 07-28-22	SECTION	PAGE ii of iv	REVISION C
---	----------------------------------	-------------------------	----------------	-------------------------	----------------------

REVISION PAGE

Rev.	Description	Date
-	Initial Release	08-11-97
A	Added ST98 information	10-23-00
B	Update format, add ST50, ST51, ST75, Update company name and address	07-11-12
C	Updated document template to current format. Added info for Gen3 instruments (ST51A, ST75A, ST75AV). Performed minor cleanup of verbiage and figures.	07-28-22

SUBJECT	CAGE CODE	DATE	SECTION	PAGE	REVISION
FC88 Kit Instructions	64818	07-28-22		iii of iv	C

TABLE OF CONTENTS

INTRODUCTION..... 1

 General 1

 Ordering of Parts..... 1

 Publication Requests 1

AF88/AF89 OPERATION..... 1

 Using FC88 With Multiple Instrument Models..... 1

GF90/GF92 OPERATION 3

FLEXMASSTER OPERATION..... 4

ST98 OPERATION 5

ST50, ST51, ST75 (Gen1) OPERATION..... 6

ST51A, ST75A, ST75AV (Gen3) OPERATION 7



Company Headquarters: 1755 La Costa Meadows Drive, San Marcos, CA 92078-5115

DOCUMENT NUMBER

08EN000525

SUBJECT

FC88 Kit Instructions

CAGE CODE

64818

DATE

07-28-22

SECTION

PAGE

iv of iv

REVISION

C

This Page Intentionally Left Blank

SUBJECT	CAGE CODE	DATE	SECTION	PAGE	REVISION
FC88 Kit Instructions	64818	07-28-22		1 of 7	C

INTRODUCTION**General**

1. This kit contains the parts necessary to connect the FC88 Control Display to the GF90/GF92, AF88/AF89, ST95/ST96, ST98, ST50/ST51/ST75/ST75V, and ST51A/ST75A/ST75AV instruments.
2. Connection instructions are given that show how to connect the FC88 to FCI's instruments.

Ordering of Parts

Ordering of parts are to be directed as follows:

Fluid Components International LLC
1755 La Costa Meadows Drive
San Marcos, California 92078
Attention: Customer Sales
Phone: (800) 854-1993 or (760) 744-6950 or Fax: (760) 736-6250
www.fluidcomponents.com

Publication Requests

Requests for copies of publications should be directed to the address shown in the above paragraph.

AF88/AF89 OPERATION

Plug the cable into the FC88 as shown in Figure 1. Plug the other end of the cable into P1 of the main circuit board of the AF88 or AF89 as shown in Figure 1. If the FC88 will not be used in conjunction with the FlexMASSter the adapter circuit board may be discarded. The FC88 is ready for use.

Using FC88 With Multiple Instrument Models

If an FC88 Control Display Unit has been used on a FlexMASSter instrument and it needs to be used on an AF88 or AF89 instrument the FC88 will need to be reprogrammed. The following instructions reprogram the FC88:

1. With the FC88 cable disconnected from the AF88/89, simultaneously press the CTRL, SHIFT, and F1 keys.
2. While holding down all three keys pressed in Step 1, plug the FC88 cable into the energized AF88/89.
3. A message should immediately come up on the screen of the FC88 as shown below.

LOAD DEFAULT DATA!

ARE YOU SURE?

YES NO

SUBJECT

FC88 Kit Instructions

CAGE CODE

64818

DATE

07-28-22

SECTION

 
PAGE

2 of 7

REVISION

C

4. Press the "A" (YES) key on the FC88. Wait for the FC88 to beep.
5. Press the following keys in sequence (not simultaneously): SHIFT, CTRL, SPACE.
6. Press the "A" key until "9600 BAUD" appears on the screen. Press the "E" key to save.
7. Press the "A" key until "PARITY=SPACE" appears on the screen. Press the "E" key to save.
8. The screen should now read "32 CHARACTER DISPLAY". Press "E" to save.
9. The set-up is complete. If the FC88 is plugged into a working AF88/89 the FC88 should now be operating in its normal mode with the instrument.

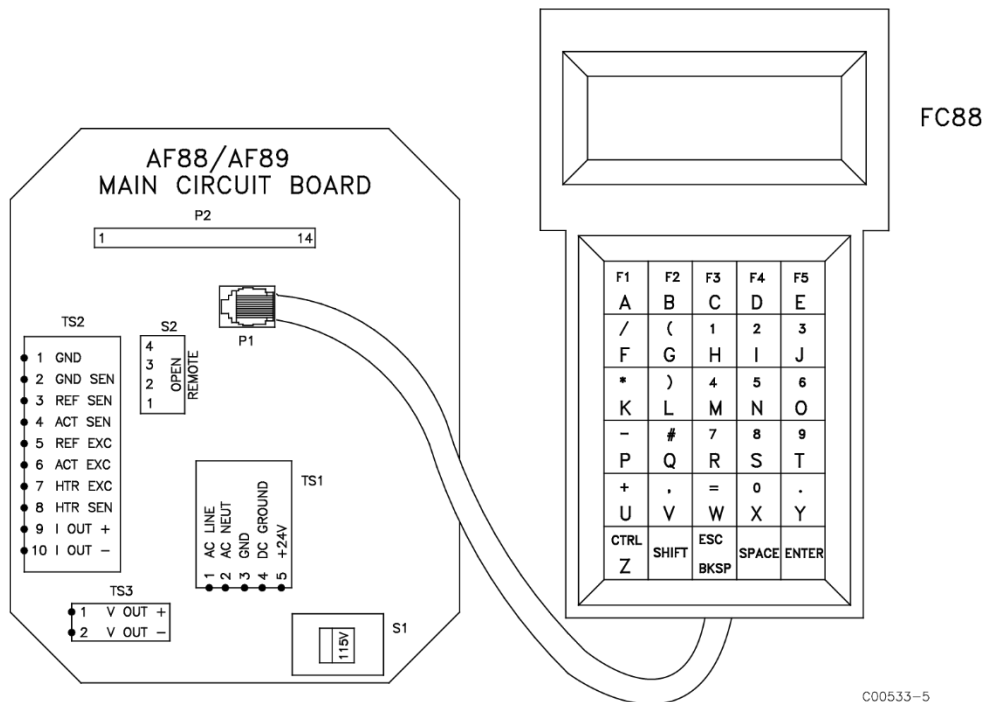

C00533-5

Figure 1

SUBJECT
FC88 Kit Instructions

CAGE CODE
64818

DATE
07-28-22

SECTION

 
PAGE
3 of 7

REVISION
C

GF90/GF92 OPERATION

Plug the cable into the FC88 as shown in Figure 2. Plug the other end of the cable into JP3 of the top control board of the GF90 or GF92 as shown in Figure 2. If the FC88 will not be used in conjunction with the FlexMASter the adapter circuit board may be discarded. The FC88 is ready for use.

GF90/GF92
TOP CONTROL BOARD

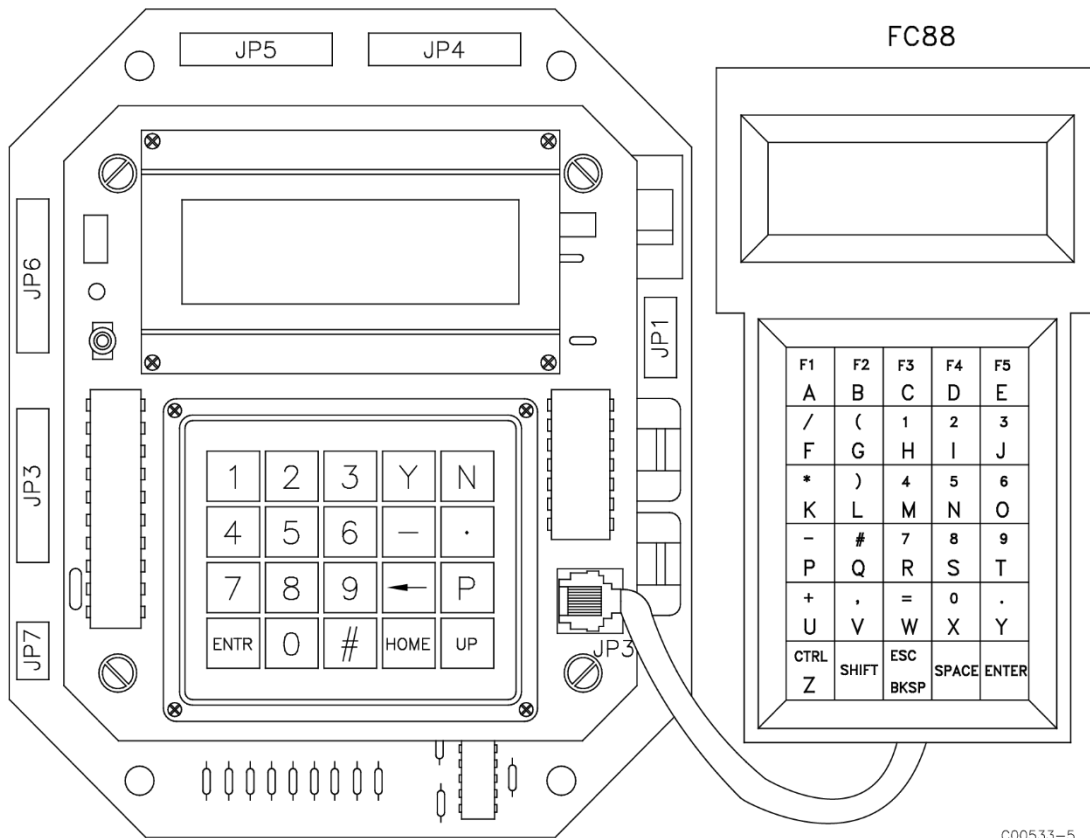

C00533-5

Figure 2

SUBJECT

FC88 Kit Instructions

CAGE CODE

64818

DATE

07-28-22

SECTION

PAGE

4 of 7

REVISION

C

FLEXMASSTER OPERATION

Plug the cable into the FC88 as shown in Figure 3. Plug the other end of the cable into the P1 of the adapter circuit board Part Number 016932. Plug P2 of the adapter circuit board into the serial communication connector of the processor board of the FlexMASster instrument as shown in Figure 3. The FC88 is ready for use.

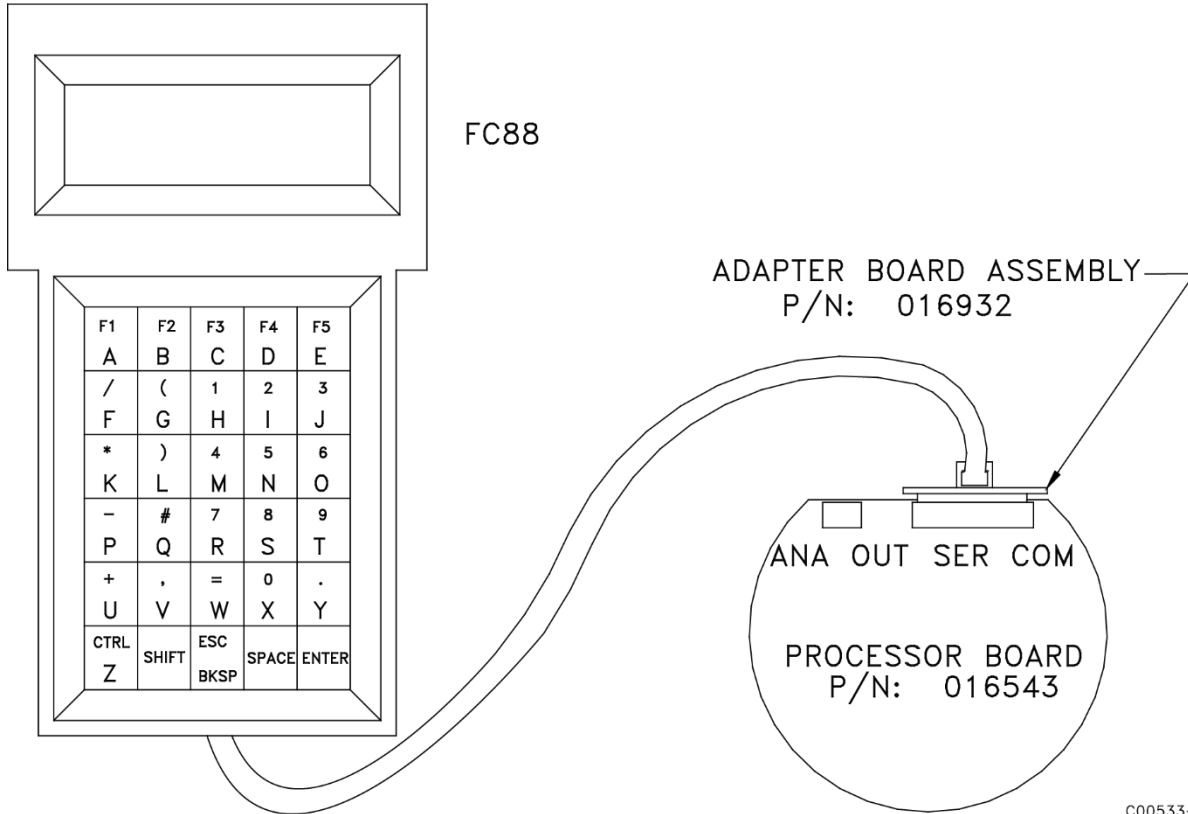 


Figure 3

SUBJECT

FC88 Kit Instructions

CAGE CODE

64818

DATE

07-28-22

SECTION


PAGE

5 of 7

REVISION

C**ST98 OPERATION**

Plug the cable into the FC88. Plug the other end of the cable into P1 of the Customer Connection Board inside of the ST98 instrument (pictured in Figure 4). The FC88 is ready for use.

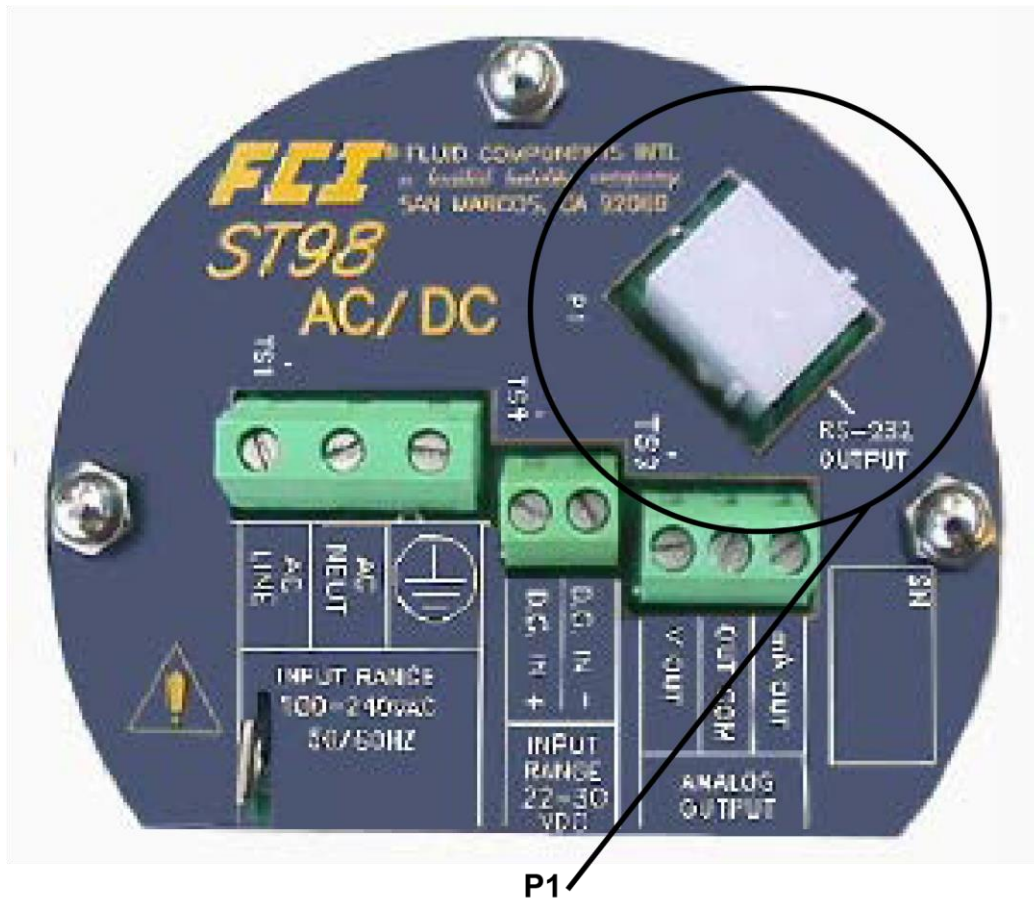 **Figure 4**

SUBJECT

FC88 Kit Instructions

CAGE CODE

64818

DATE

07-28-22

SECTION

PAGE

6 of 7

REVISION

C

ST50, ST51, ST75 (GEN1) OPERATION

Plug the cable into the FC88. Plug the other end of the cable into P3 of Customer Connection Board inside of the ST50, ST51 or ST75 instrument (pictured in Figure 5). The FC88 is ready for use.


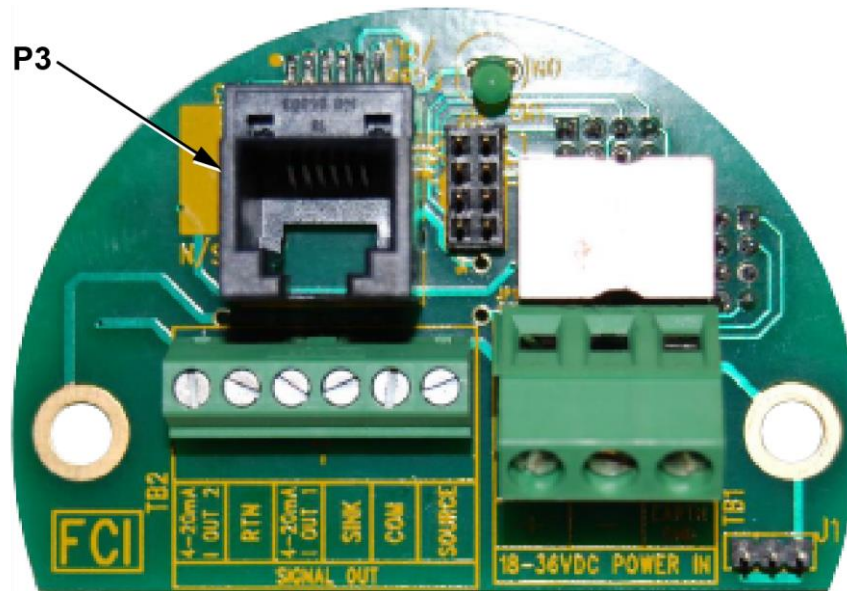 


Figure 5

SUBJECT FC88 Kit Instructions	CAGE CODE 64818	DATE 07-28-22	SECTION	PAGE 7 of 7	REVISION C
---	----------------------------------	-------------------------	----------------	-----------------------	----------------------

ST51A, ST75A, ST75AV (GEN3) OPERATION

 An RS-232 serial port is provided via a .100" 2 x 3 header connector (J9) on the interface board (remove blind lid for access). Plug the serial cable adapter assembly **025859-01** onto the J9 header as shown in Figure 6 below (make sure the connector latch is oriented as shown). Then plug the other end of the cable (the **longer** of the two modular connector cable ends) into the FC88 handheld calibrator. Note that the **025859-01** cable has a dual purpose—the other (unused) short cable end with the modular plug is for connecting a Gen1 (ST50, ST51, ST75, ST75V) instrument to the FC88.

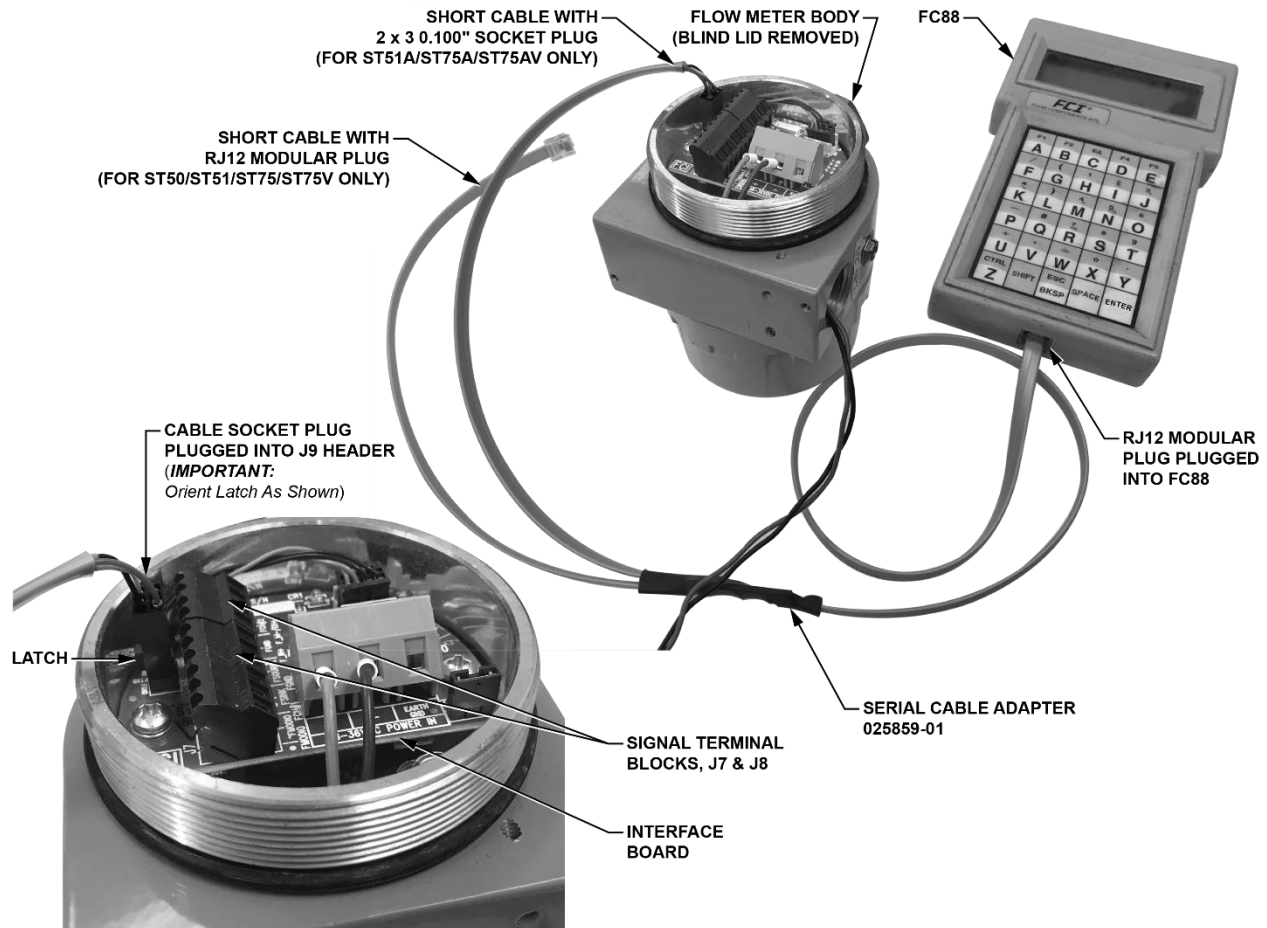

Socket Plug Detail

C01404-2-1

Figure 6