
2. Installation

The following information should be included on page 2-4 under the heading of In-Line Mounting.



ST98L FLOW ELEMENT REMOVAL AND INSTALLATION

If the flow element needs to be removed from the tee section for any reason, *do not* allow the element to rotate during the removal/installation process. Flats are supplied on the flow element to hold the element from rotating during removal/installation.